

Daily Cleaning

Melitta CT8
Espresso Machine




The Melitta espresso machine must be cleaned at least once a day to ensure a quality product and trouble free operation


Melitta Combi
tablets
2900018




Melitta Combi tablets are the only approved cleaner for this machine

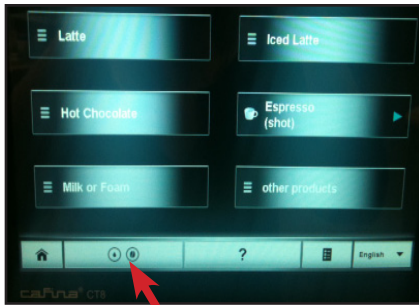


Touch the 'Clean' icon next to 'Home'

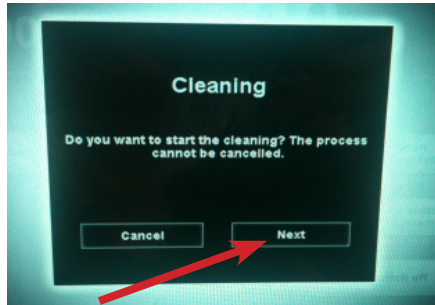

Touch the icon 'Next' if you are ready to clean

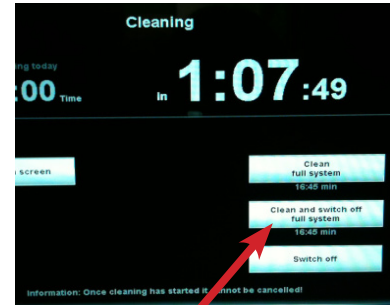


Next, select "Clean and switch off full system"

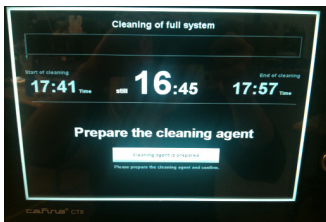


Cleaning agent is either two combi tablets or a delimer packet

Wed and Sun for delimer

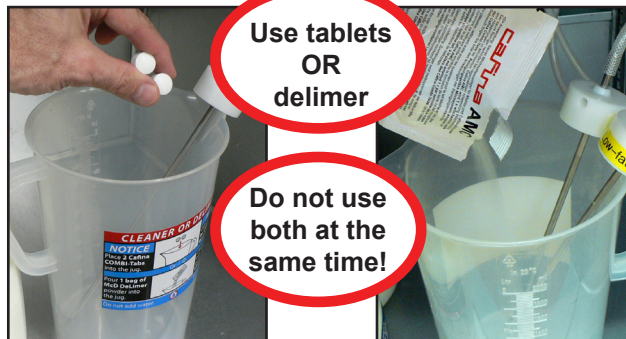

Place 2 tablets in milk pitcher

Pour one packet of delimer in pitcher

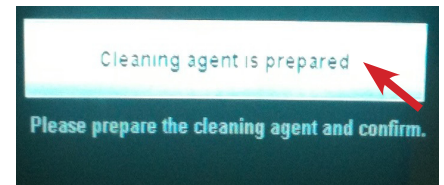

Once the milk lines, cleaning tablets or delimer have been placed in the pitcher, press 'Cleaning agent is prepared'



Unlock and open front panel - remove the tablet container - insert a cleaning tablet into the container - replace the tablet container locking it in place




Press the tablet inserted button to start the cleaning process and your done!



The ct-8 will automatically clean/sanitize and switch off when it is finished with the cleaning cycle. Remove milk lines from the cleaning pitcher once the machine is off.

Operating Guide

Melitta CT8
Espresso Machine

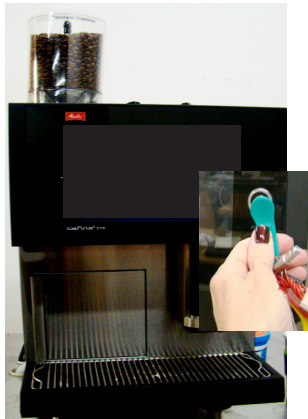


Use the green key FOB to power on the CT8

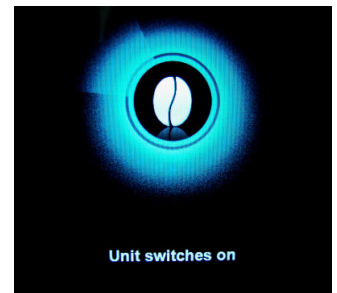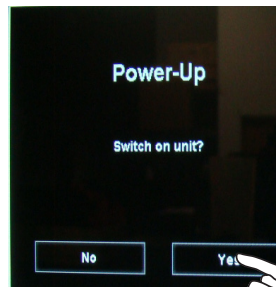


The key fob system allows for easy operation and regulates access for staff (green) and managers (yellow)-for managers ONLY

The next screen will ask you if you want to power up the espresso machine. Press 'Yes'


"Unit switches on" icon will appear.

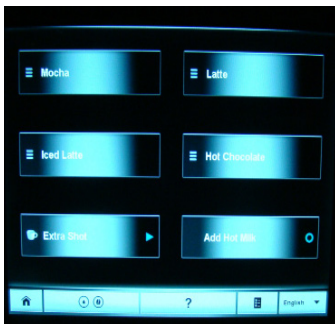

Once the machine is operational, the drink menu will appear.

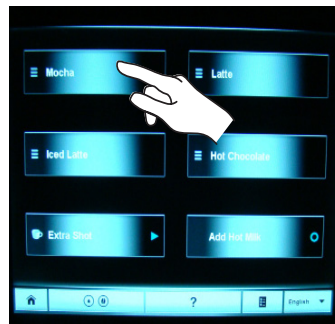

To make a drink, press the drink icon. For example, 'Mocha'

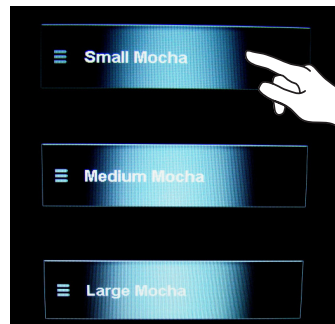


The next screen will display the sizes. Press the size for the drink. For example, 'Small Mocha'



The next screen will display which type of milk. Press and hold your selection and the machine will dispense the drink.


To Fill Bean Hopper or for "product not available" screen.....

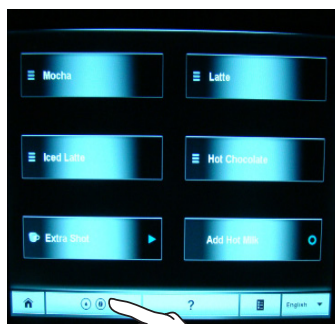


Press the 'Water Bean' icon.



Or close the error message and go to Home for the 'Water Bean' icon

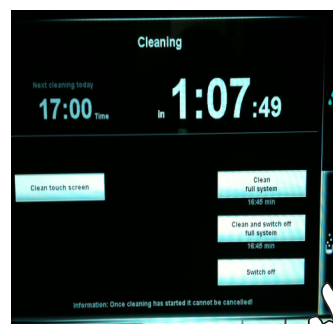

The screen will automatically go to the cleaning screen. Press the icon for fill beans

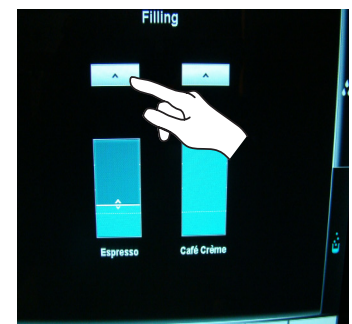

Once the beans are in the hopper, press the arrow for filling until level is full. Then press the 'Home' icon